




# Wen 2307 Power Switch Replacement

This guide is here to help the user replace the power switch on their Wen 2307 rotary tool.

Written By: Joshua Bowery

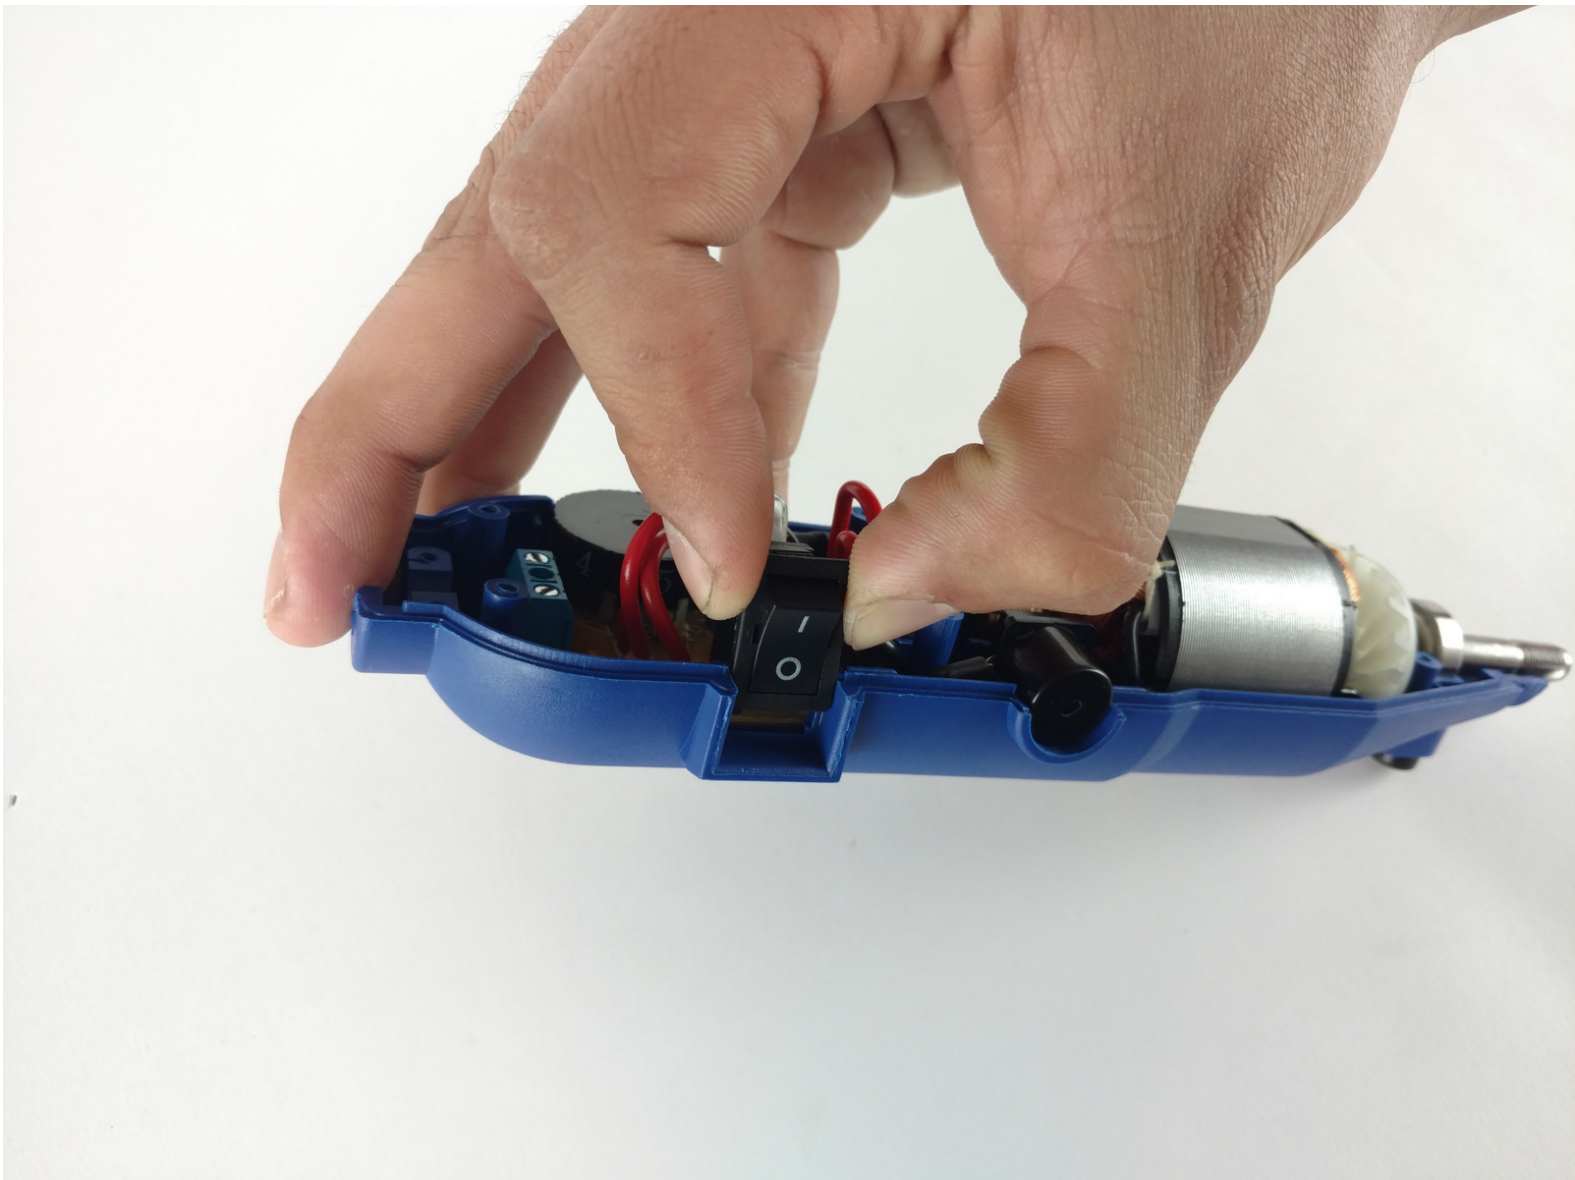

## INTRODUCTION

One possible reason for your device not powering on is a damaged power switch. Use this guide to replace it.

---



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Front Panel



- Unscrew the locking sleeve.

## Step 2



- Remove the hanging clip.

## Step 3



- Unscrew the six 8mm PH2 screws.


## Step 4



- While pressing the spindle lock button, unscrew the collet nut and remove it along with the brass collet.



## Step 5

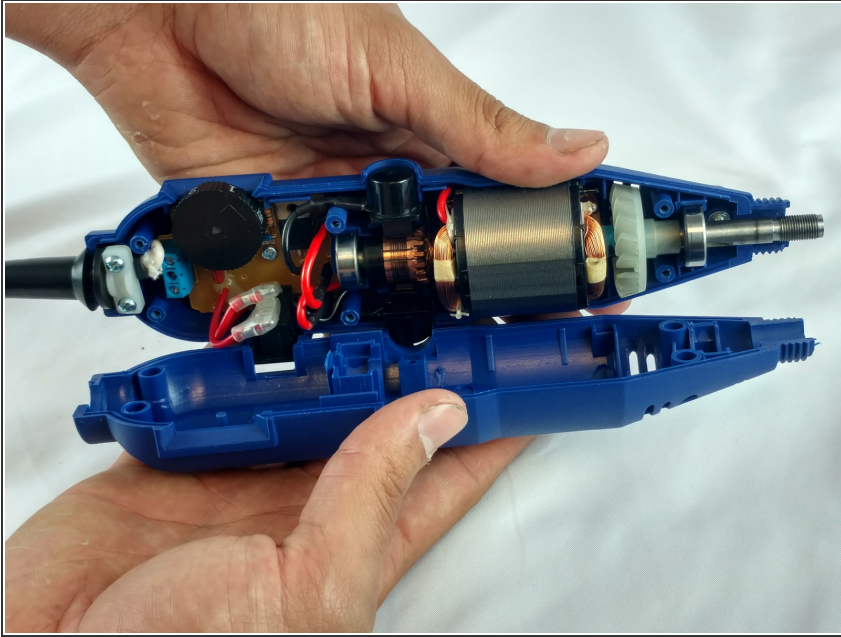


- To remove the front panel, pry the device apart while holding the device with the other hand.
- ⓘ The front panel should come out easily.

## Step 6 — Power Switch



- Firmly grasp and lift out power switch.

## Step 7

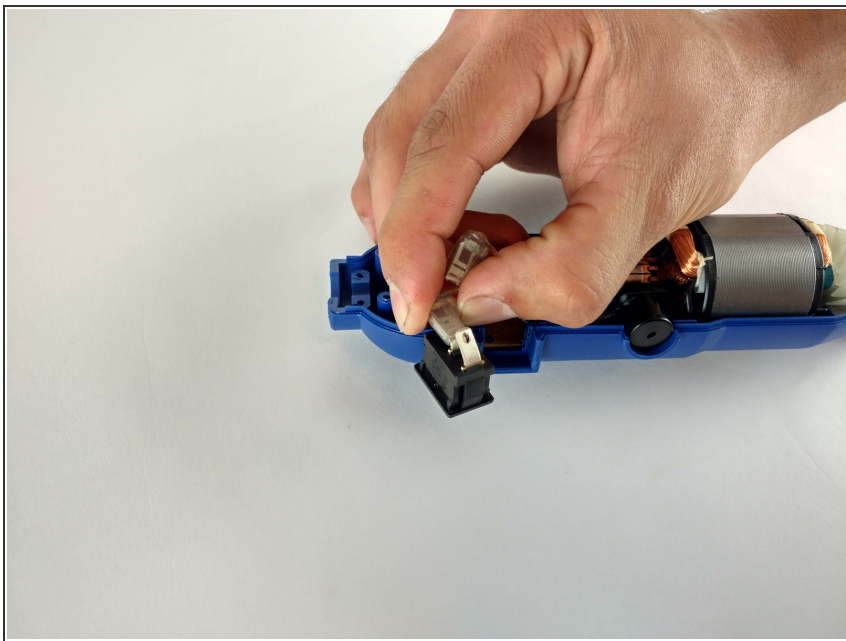

- Firmly grasp and disconnect cables.
- ⓘ Make sure to mark your cable positions so you do not reverse them when putting back together.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-25 02:26:15 PM.